



QUICK START

1.



Connect the keyboard to your computer with the **USB cable** and turn your computer **ON**.

2.



Press the **Fn Lock key** at the upper right corner of the keyboard to active the **Orange keys**.

3.



Press the **Magnifier ON key** to activate **Magnifier Mode**.

You are now ready to use all the keyboard functions.

FULL GUIDE



INTRODUCTION TO **Fn** KEYS

To activate a F1-F12 function, press the **Fn Lock** key in the top right corner of the keyboard. This provides direct access to all F-key Accessibility functions.




The **Fn-Lock** LED indicator lights up when fn-Lock is activated.

Alternatively, you can press the **Fn** key together with the designated key for temporary access to the key's Fn function.

ACCESSIBILITY FEATURES

F1

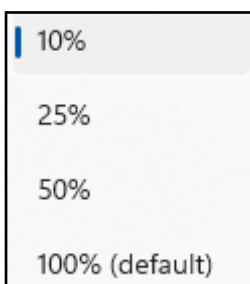

Press this key to open the **MAGNIFIER SETTINGS**.

Here you can adjust Magnifier zoom levels, zoom increments, set Magnifier to turn on automatically when Windows starts up and change the Magnifier view and reading.

In the “Zoom level” section of Magnifier Settings, click the dropdown arrow on the right. This opens the “Zoom increment” menu. We recommend changing from the default setting to 10% or 25%.

Close the Settings window using the “X” in the top right corner to close the Magnifier Settings window.

F2



FULL SCREEN ZOOM VIEW MODE

Switch to full screen view. When zooming in the entire screen is magnified.

This only works if Magnifier is on!

F3



LENS ZOOM VIEW MODE

Switch to Lens view. Move the mouse to pan a magnification lens across the screen.

This only works if Magnifier is on!

F4**DOCK VIEW MODE**

Switch to Dock view. A dock at the top of the screen shows a magnified view of the pointer location.

This only works if Magnifier is on!

F5**TURN ON MAGNIFIER & ZOOM IN**

Each press increases zoom based on the selected increment around the area where the mouse cursor is located.

The first time you press this key, it turns Magnifier on!

F6**ZOOM OUT**

Zoom out decreases magnification on the selected increment around the area where the mouse cursor is located.

This only works if Magnifier is on!

F7**ZOOM 100%**

Toggles between 100% zoom and the set magnification.

This only works if Magnifier is on!

F8**TURN MAGNIFICATION OFF**

This only works if Magnifier is on!

F9

INVERT COLORS

Invert colors in the magnified area to reduce eye strain or make text more readable for some people. To return the colors to normal, press the key again.

This only works if Magnifier is on!

F10

HIGH CONTRAST MODE

Changes the appearance of Windows and Microsoft apps to high contrast theme.

When activating High Contrast Mode a prompt will remind you that High Contrast Mode is about to be activated.

F11

VOICE TYPING

Opens the dictation tool, Voice Typing.

Click inside the input field with the mouse cursor before activating Voice Typing.

F12

MAGNIFIER READER

Turn Magnifier Reader ON or OFF. The Magnifier Reader will start reading from the location the mouse cursor has been clicked.

This only works if Magnifier is on!